



Kellsport Products
www.kellsportproducts.com
Pro spray gun for Woolwax ®



-> When the screw on nozzle is screwed all the way in, it is in the closed position. Nothing will come out except air. Just screw it in 1 or 2 turns. Just enough to make the connection. The same for the extension wands. Screwed all the way in is closed and will not work.

This gun has been modified to work well with Woolwax® formulas. This gun is equipped with an adjustable nozzle allowing the user to control the product flow and to spray different textures. The optional plastic wands can be used for spraying cavities, frame rails, doors etc. *It is always helpful to warm and stir the undercoating product before spraying.*

ADVANTAGES:

- Working pressure: 40-90 psi (max 120 psi) 80-90 psi is usually good.
- Approximate air consumption: 3-5 CFM
- Adjustable nozzle sprays different textures
- Aluminum plunger 7" long
- Gun Frame Made in Italy

Start with the nozzle all the way open, which is just screwed on 1 or 2 turns. Please note that **the gun will not work if the nozzle is not installed.** To install an optional wand, unscrew the nozzle first, and then screw the wand into the gun. Make sure not to screw the wand in more than 1 or 2 turns. When using wands increase psi to 100-110 psi if necessary.

Tips:

- Make sure that the small hole in the collar remains unclogged at all times.
- When using the gun for the first time, you may need to experiment with the adjustable nozzle setting to start the gun spraying. **Start with the silver nozzle screwed in only 1 or 2 turns. When the nozzle is screwed in too far, it is in the "closed" position, and will not work.**
- A quick cleaning can be accomplished by filling a clean, empty product canister with a cup of solvent (paint thinner, etc) Spraying this solvent through the gun will loosen the product inside. Plain water will work just as well.
- Be careful when bending the flexible wands. If they bend too much, they will "crack" and become unusable
- Do not try to extend the length of the flexible wands. It will not work.
- It is sometimes helpful to screw a small inexpensive regulator to the gun to adjust the pressure. These are available at most home centers.
- You may need to work with the pressure settings a bit to find the best setting for your setup. Ideal pressures vary by compressor, hose length, etc.
- **Wear safety goggles** to protect your eyes from spray material or particulate that may come loose from the object being sprayed
- **Wear a proper safety mask** to stop dust and fumes from entering your lungs.
- **Do not try to unscrew the long siphon tube or the fitting on the handle. Nothing else is removable except the silver nozzle.**